


FIXING STEPS

- A The Econodeck clip is fitted over the Upturned edge / Sealant strip, pushed into the Female Slip-joint and screwed to the purlin.
- B The next panel Rib joint is fitted over the Clip & Upturned edge, making contact with the Sealant strip.
- C The Slip-joints are then engaged.
- D The exposed portion of the Clip is folded back over the Rib joint using a special tool (available from Austral Australia) which locks both panels together, to the purlin.
- E All Ribs are then "button punched" at 450mm ctrs. to weather-seal the roof.

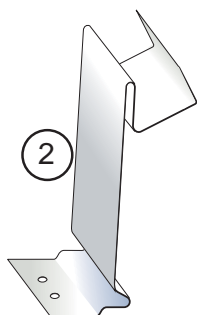

S	75	100	125	150	175	200
---	----	-----	-----	-----	-----	-----

1	ECONODECK ROOF PANEL	S= mm
2	ECONODECK CLIP	100 x 45 x (S + 34) @ 1mm thickness GALV. STEEL
3	WAFER HEAD FIXING SCREWS	2 @ 10 - 16 x 16mm (or type 17 with a min. 35mm into timber)

POS	ITEM & DIMENSIONS	MATERIAL
-----	-------------------	----------